

Descaling Dishwashing Machines

Before you start

- ✓ Read label directions and Safety Data Sheets (SDS) of chemicals prior to use.
- ✓ Wear Personal Protective Equipment as per the SDS such as safety glasses and suitable gloves when handling chemicals.
- ✓ NEVER MIX CHEMICALS.
- ✓ Turn OFF chemical dispenser.
- ✓ Empty the dishwashing machine.
- ✓ Follow all dishwashing machine manufacturer instructions.

Pre-rinsing the machine

1. Fill the dishwashing machine with clean water.
2. Run one full wash cycle.

Descaling the machine

1. Add 250ml of DESCALE to dishwasher or washing machine.
2. Run through cycle for a minimum of 10 minutes.
3. Ensure no other chemicals are used and that chemical feed pumps are turned off or disabled during use.
3. Rinse with water.
4. Repeat if necessary until you are happy with the appearance of the machine.
6. Empty the dishwashing machine.

Setting up the machine for use

1. Fill the dishwashing machine with clean water.
2. Run one full wash cycle.
3. Empty the dishwashing machine.
4. Ensure that no DESCALE is left in the dishwasher before the chemical dispenser is turned on.
5. Turn ON the chemical dispenser.
6. Refill the dishwashing machine and titrate the wash water to ensure correct dispenser set up.